

Thank you for purchasing a National Cycle Accessory. Before beginning installation please look over this guide and be sure one possess the skills and workshop tools to properly complete the installation. Otherwise a motorcycle dealer would be glad to complete the installation.

Dealers: If installing the windshield for a customer please give them this manual. It contains information needed to properly maintain and use this product.

Attention:



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

Parts Included

<u>INDEX</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	Quantum Hardcoated Polycarbonate VStream Windscreen	1



4mm Hex Key Wrench



PREPARATION and REMOVAL OF PARTS

 Installation photos are taken from right side of motorcycle.

1. Position the motorcycle securely on its stand.

 The six screws removed in step 2 are different lengths. Make note of their locations at removal for re-installing.

2. Remove the six, 4.0mm hex head bolts from around instrument cluster. **(4.0mm Hex Wrench) Figure 1**

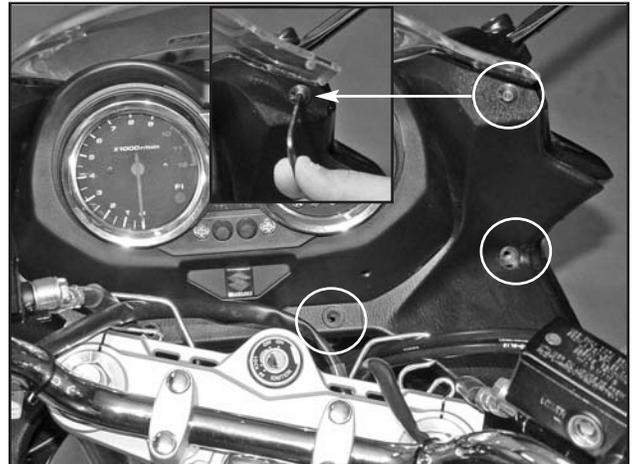


Figure 1

 The instrument cluster is held in by tabs that will unhook.

3. Move instrument cluster forward (toward rider) to gain access to the two windshield mount bolts. These mount bolts are located at the lower portion of the windshield. **Figure 2**



Figure 2

4. Remove the two lower bolts. (4mm Hex Key Wrench)
Figure 3

5. Remove stock windshield. **Figure 4**

INSTALLATION
Install VStream Windscreen

1. Slip the VStream windscreen into position for mounting.
Figure 5



Figure 3



Figure 4



Figure 5

2. loosely install the two upper windshield mount bolts. Do Not Fully Tighten. **(4mm Hex Key) Figure 6**

3. loosely install the two lower windshield mount bolts. Do Not Fully Tighten. **(4mm Hex Key) Figure 7**

4. Tighten all four bolts securely. **(4mm Hex Key)**

5. Reposition instrument cluster to original position, ensuring tabs are in proper position.

6. loosely install the remaining six bolts, replacing each back into their original position. **(4mm Hex Key Wrench) Figure 8 and 9**

7. Tighten all fasteners securely.



Figure 6



Figure 7



Figure 8



Figure 9

MAINTENANCE

Cleaning: Wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Do not use rain protective products on the screen due to the solvent action of the alcohol in these products. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

National Cycle Windshield Wash Part number N1401 is recommended for everyday cleaning. Product is supplied with a handy travel size container and rag for easy storage on the motorcycle.

RAINZIP® TREATMENT

National Cycle's rain repellent treatment is formulated for Quantum Hardcoated Windshields. RainZip treatment N1410-01.

Inquire with your local dealer or visit: www.nationalcycle.com

WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.

VStream® Wind protection products are covered by patent 7,387,328.

VStream® and National Cycle® are registered trademarks of National Cycle, Inc.

National Cycle, Inc. Maywood, IL 60153-0158 USA 708-343-0400 / Fax: 708-343-0625

www.nationalcycle.com / e mail: info@nationalcycle.com

Page 4 of 4.

10-118565-000 10/10