ANBAUANLEITUNG mounting instructions • instructions de montage • instrucciones de montaje • istruzioni di montaggio

HPR.00.666.42800/WH

beinhaltet • contains • contient • contiene • contiene


STM-007-01-NP





FITTING INSTRUCTIONS for

Storm STM-007 with Aluminium Backbone for Handlebars with an Internal Thread

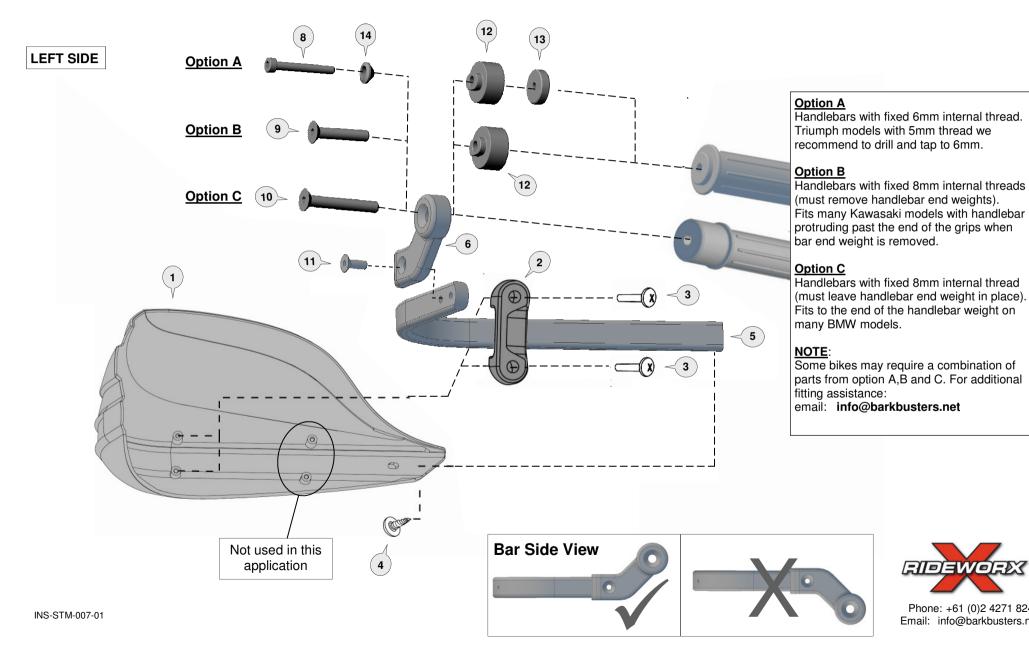



Email: info@barkbusters.net



NOTE: Model STM-007-01-NP does not include Items 1, 2, 3 & 4

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Disclaimer:

INS-STM-007-01

Rideworx inspects all products prior to packaging and strives toward improving its products. Our guarantee is limited to the replacement of defective products. This limited guarantee is in lieu of all other guarantees or warranties implied or expressed. Buyer assumes all risk for any and all damage caused to him/herself, a third party and/ or property by virtue of failure of this product. We make no warranty as to products distributed by Rideworx, expressed or implied from our suppliers or third party vendors. This includes, without limitation, any warranties in processed. Buyer assumes all risk for any and all damage caused to him/herself, a third party and/ or property by virtue of failure of this product. We make no warranty as to products distributed by Rideworx, expressed or implied from our suppliers or third party vendors. This includes, without limitation, any warranties or merchantability and fitness for a particular purpose. All applications we determiner of abuse, installation errors and modifications. We assume no liability for any errors in listings, specifications, product quality, pricing and application at any time without further obligation. These handguards are not designed to prevent injury in the event of an accident or crash. Ensure all controls are free of the handguards each time you ride. Failure to follow the instructions or heed this warring could lead to less of control of your motorcycle and/or accident. Jujury or details are lideworx product, you hereby accept and understand these stated terms and conditioned at linstructional steps.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)



Phone: +61 (0)2 4271 8244 Email: info@barkbusters.net Web: www.barkbusters.net

