


# SHAD

## BMW F 850GS / 750GS '18 KIT TOP W0FS88ST

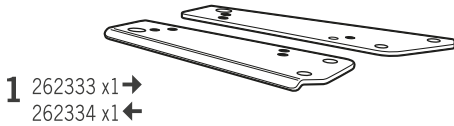

1 262333 x1 →  
262334 x1 ←



2 260954 x6  
Ø14 Ø9 x 16



3 304029 x2  
M6 x 35 DIN 7991



4 304201 x4  
M6 x 40 DIN 7380



5 303017 x4  
Ø6

### ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

